

## SERVICE BULLETIN / TECHNICAL TIPS

**Title:** SBW080511 - Coyote – Proper Shutdown Procedures

**Timeline:** As needed

**Subject:** Coyote – Protecting Your System with Proper Shutdown Procedures

**Note:**

Improperly shutting down the system can result in errors in the Coyote, Windows® and/or cause the Line Controllers to fail.


**Warnings:**

- Shut down the system prior to any welding, line maintenance, or scheduled power outages.
- Do not disconnect any cables/wires/connections inside the cabinet.


**Shutdown Procedure:**

Step 1 - Make sure all lines are stopped and not operational prior to proceeding.


Step 2 - Through the Coyote – go to Application > System Shutdown.

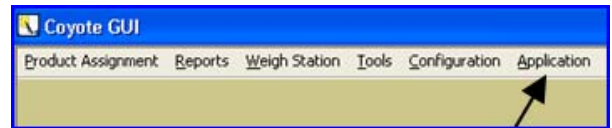

Step 3 - When this message appears: “Warning! You are about to shutdown the system. Are you sure you want to continue?” – Click Shutdown.

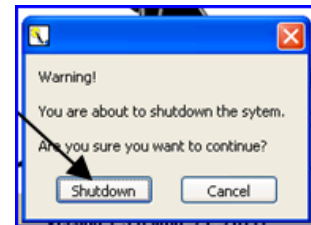

Step 4 - Another dialog box will appear displaying the shutdown status.

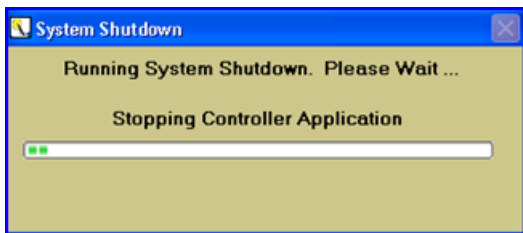

Step 5 - A final dialog box will appear stating “This will exit Windows and power off your computer”. Click OK.

Step 6 - Inside the cabinet, turn off the red illuminated power switches on the power strip and UPS.

**Startup Procedure:**

Step 1 – Verify Line Controller power switches are in ON position.

Step 2 - Turn on power to UPS and power strip.

Step 3 - Turn on Coyote’s PCs by pressing the power buttons.

Step 4 - Start the Coyote application by double-clicking the desktop icon.

Step 5 - Validate that all line controllers have started and are communicating (Configuration > System Configuration > Current Status = needs to be “OK”). Line controller check box (bottom right) should be green (checkmark).